



Installation Manual

For

Alumavator / Platinum
Boathouse Lifts



Safety Precautions




1. Your boat lift is a heavy duty piece of equipment. It is important that all persons that may operate this unit have read and understood the owner's manual. Given the inherent dangers of heavy machinery, your boat lift deserves respect, and good judgment is required in its operation. Before allowing others to operate the unit be certain that they understand the proper operating procedures. Do not allow children to operate the lift.
2. This product is for lifting unoccupied boats. Do not ride in your boat or on the lift during operation. Always attend the controls when operating the lift, and watch carefully to have others stand clear. Keep hands, feet, and clothing away from all moving parts.
3. Your lift is operated by electricity, therefore, additional care must be taken. It must be wired by a licensed electrician, and it must be installed with an approved ground fault interruption device. If you observe severed or damaged wiring, it must be repaired immediately by an electrician. When properly installed and maintained, electrical devices such as this lift are completely safe. However, any electrical device used in and around a water environment must be treated with great respect to prevent accidental electrocution. All electrical maintenance and service to this lift must be done by a licensed electrician.
4. While operating your lift, routinely look at all cables for fraying, damaged ends, or loose strands. A damaged cable must be replaced immediately. Make sure that all pulleys are turning properly. Routinely look over cables to make sure that they are winding properly. Look for signs of extreme wear and unusual corrosion, as well as, exposed or damaged electrical wires. If you find any of the above, have the problem repaired immediately.
5. Do not work on your boat or lift while the boat is hoisted. When working on your lift, keep your hands, feet, and clothing away from all moving parts. Exercise great care if chains or gearing are exposed. Never work underneath a raised lift, and do not walk or stand on a raised lift. Always disconnect electrical power when working on any part of the lift.
6. Be careful not to exceed the rated capacity of the lift. To determine the total weight of your equipment to be lifted, study the boat manufacturer's literature to determine its weight. Be sure to add enough extra weight to compensate for your added accessories, including water and fuel. Gasoline weighs about 6 lbs. per gallon and water weighs about 8 lbs. per gallon.
7. If you plan to leave your lifted boat unattended for several weeks, it is important that you remove the drain plug in the boat to prevent it from filling with rain water. Accumulated rain, snow or other water in your boat can rapidly become heavy enough to exceed the capacity of a lift, causing personal injury or damage to the boat and lift.

Welcome, and congratulations on your purchase of an Imm Quality Boat Lift! At Imm Quality Boat Lifts, we take pride in making the most advanced, most durable, easy to use and low maintenance boat lifts on the market today. The installation of this lift is simplified by its' lightweight aluminum construction and by extensive factory assembly. Only Imm Quality takes the extra time to pre-wind the cable on the winders, attach the drives, motors and covers, and pre-assemble the mounting brackets, bunk brackets and guide post assembly. We do all this as an added service to make life easier for our valuable customers. In the following pages, we will take you step-by-step through the entire installation process. We urge you to read this manual before attempting installation. If you have any questions, please contact us at 1-800-545-5603 and ask for technical support.

Required Tools for Installation

- Chain Saw
- 10 " Level
- 2' Level
- 9/16" and ½" Open End Box Wrenches (2 each)
- 7/16" and ¾" Open End Box Wrenches
- Phillips screwdriver
- Flat head screwdriver
- ½" Drive Ratchet
- 9/16", ½" and ¾" Deep Well Sockets
- PVC Pipe Cutter
- Electricians Pliers
- Claw Hammer
- Cable Cutter
- 3/8" Battery Operated Drill
- 3/16" and ½" Drill Bits
- Water Level

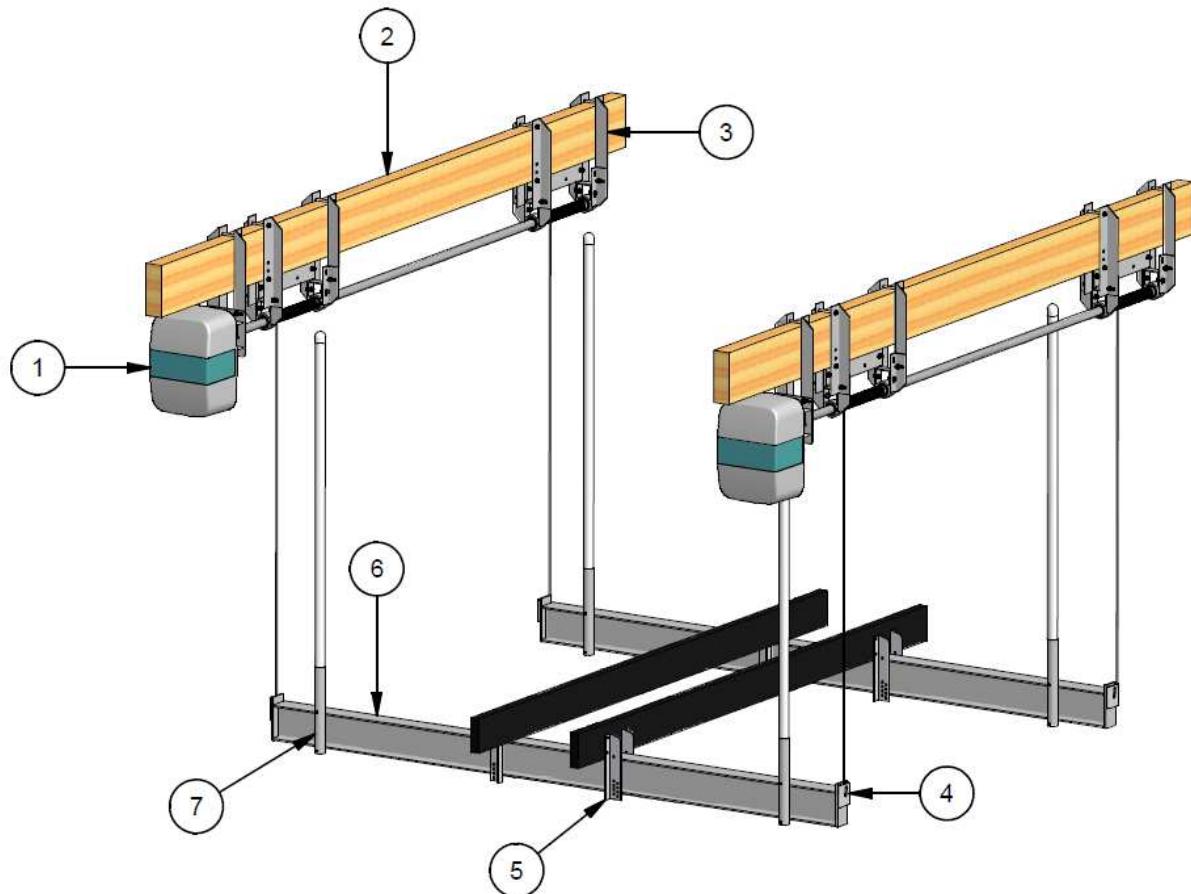

Components

- | | |
|------------------------------------|------------------------------|
| 1. Powerhead | 2. Boathouse Structural Beam |
| 3. Lift Hanger Brackets | 4. Wedge Lock |
| 5. Bunk Brackets | 6. Cradle Beam |
| 7. Guide Post Bracket and Assembly | |

Before you begin...

The structural beams and supporting boathouse structure are the foundation of the boat lift and must be able to carry the combined load of the lift and the fully loaded boat. Local and National building code and common practice varies from area to area. Consult with our technical service department or your local marine contractor for appropriate guidelines.

We have included several tables showing the dimensions of our Boathouse lifts to assist you in laying out the installation. Boathouse lifts are available in the Alumavator style, a Platinum style with an exposed powerhead and a Platinum style with lengthened hanger brackets to accommodate a covered powerhead. Table A shows the overall length of the lift, the cable drop and the horizontal spacing between the brackets and powerhead. Table B shows the distances from the top of the structural beam to the bottom of the powerhead cover or drive pipe. Simply subtract off the height of your structural beam to obtain these distances measured from below the beam. The table on the following page shows standard cradle dimensions for our boathouse lifts. Custom cradles are available to accommodate any boathouse configuration.

Typical Boat House Lift Dimensions

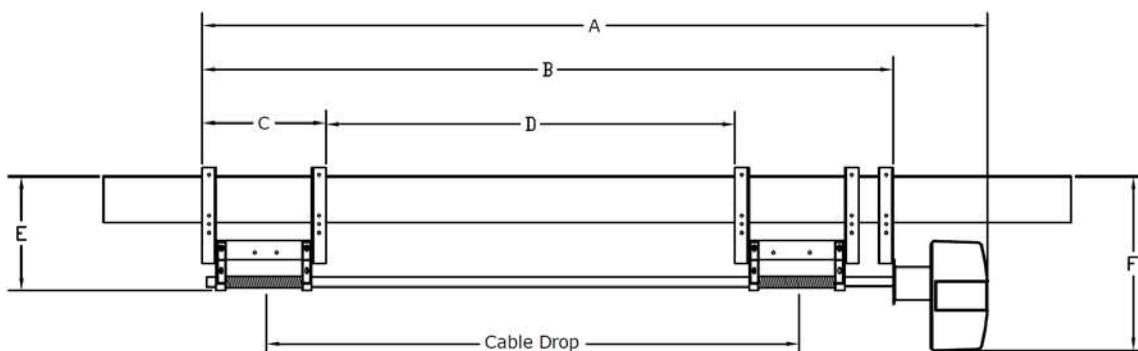



Table A

LIFT CAPACITY	A Alumavator	A Platinum	B Alumavator	B Platinum	C	D	Cable Drop
4,500 LB	155"	149"	135"	139.5"	27.25"	74"	101"
7,000 LB	167"	161"	147"	151.5"	27.25"	86"	113"
10,000 LB	167"	161"	147"	151.5"	30.25"	80"	110"
13,000 LB	167"	161"	147"	151.5"	30.25"	80"	110"
16,000 LB	167"	161"	147"	151.5"	30.25"	80"	110"
20,000 LB	187"	181"	167"	171.5"	35.25"	90"	125"

Table B


LIFT Configuration	E Bottom of drive pipe	F Bottom of cover
Alumavator	24.5"	37"
Platinum: Uncovered	24.5"	32"
Platinum: Covered	29"	36.5"

Boathouse Lift Standard Cradle Dimensions

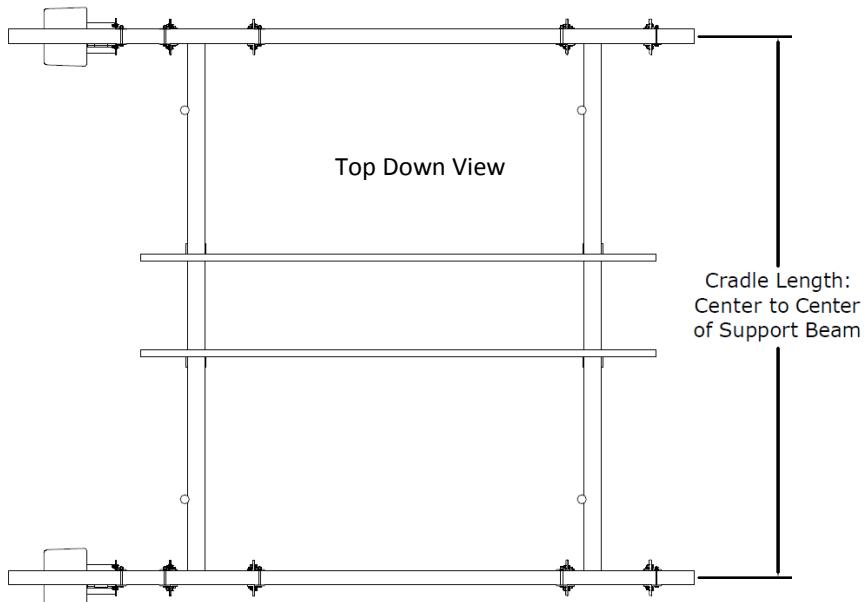

Lift Capacity lbs	Cradle Length inches	Standard Cradle I-Beam
4,500	120	6x4x.29
7,000	144	6x4x.29
10,000	150	8x5x.35
13,000	150	8x5x.35
16,000	168	10x6x.41
20,000	192	12x7x.47

Travel Specifications

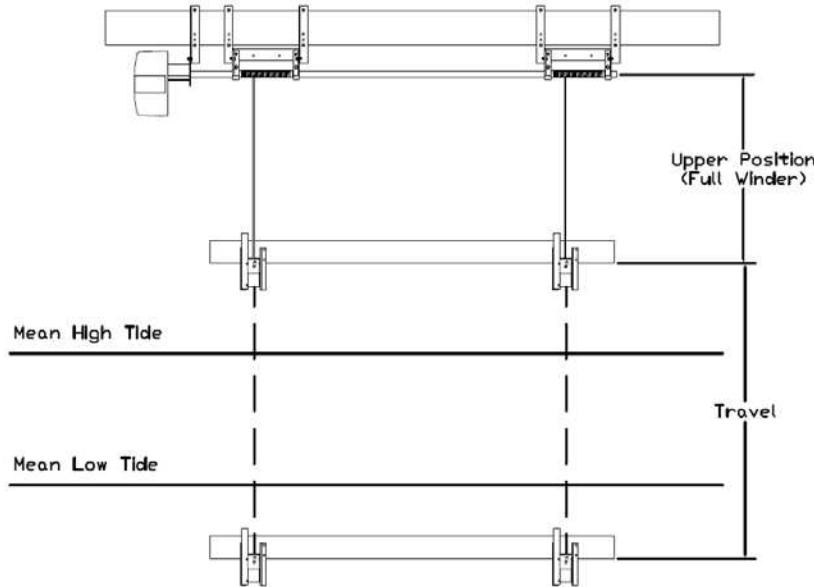


LIFT CAPACITY	LIIFT TRAVEL FT.	UPPER POSITION WITH FULL WINDER FT.	STANDARD CABLE LENGTH FT.
4,500	14	4	20
7,000	12	4	20
10,000	12	7	40
13,000	12	7	40
16,000	12	7	40
20,000	12	7	65

The **Upper Position** is the distance between the top beam and cradle beam with a full winder and the remaining cable routed through all pulleys and the wedge lock. This distance can easily be lessened by pulling more cable through the wedge lock. Note, do not make this distance less than two feet with your cable adjustments.

The lift **Travel** is determined by the size of the winder and represents the length of cable in a full wrapped winder. The relative vertical position of this fixed travel can be adjusted by changing the length of the cables. Larger custom winders can be ordered when increased Travel is required.

When determining the Travel requirements for your lift, you need to consider the height of the piles, mean high tide, mean low tide and the draft of the boat. At high tide, the upper position needs to be such that the cradles are out of the water. At low tide, the Travel needs to be large enough that the cradles can lower below the boats draft allowing the boat to float off the lift.


Boat Positioning

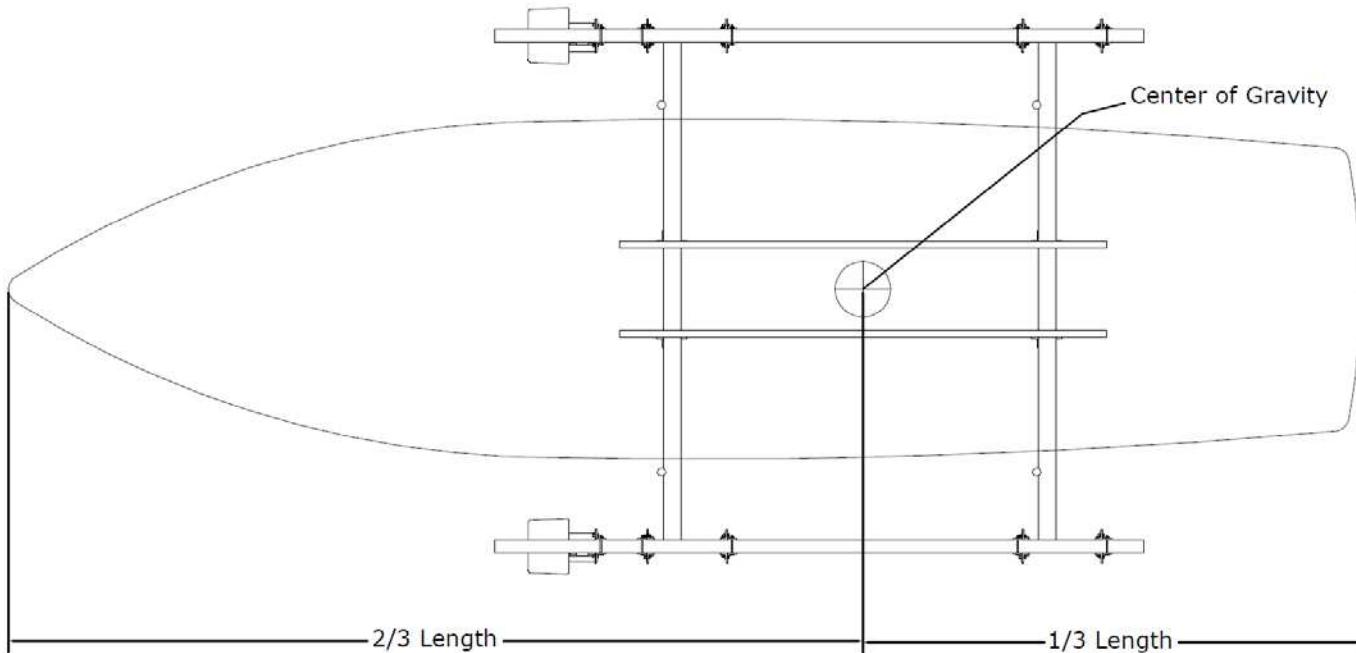

Position the boat so that its center of gravity is centered on the cradle and bunks. Because the motors are generally located in the stern of the boat, the approximate location of the center of gravity is 1/3 the total length of the boat forward from the stern. Please consult with your boat manufacturer to determine the precise location of the center of gravity.

Boats that are improperly positioned on the lift can overload one cradle beam or even a single corner. Overloading the lift in this way may result in damage to the lift, catastrophic failure of the lift and / or damage to the boat. Failures of the lift due to improper boat positioning are not covered by the warranty.

Mounting Lift to Structural Support Beam

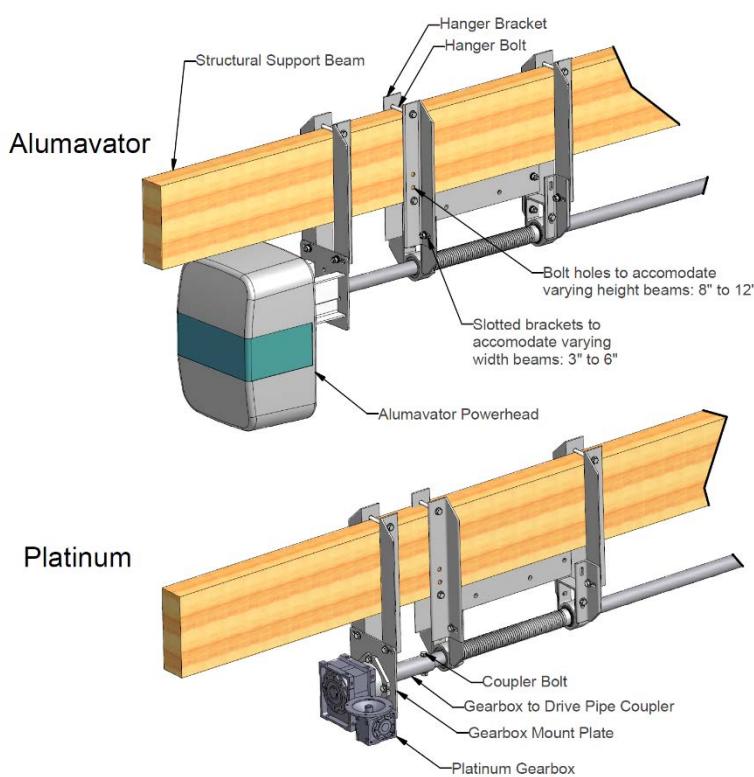

structural support beam and secure with the flat washers, lock washer and nut.

- Tighten all hardware on the hanger bracket assemblies.

Platinum Lifts with Covered Powerheads

- The Platinum lifts with covered powerheads come pre-assembled. You only need to attach the hanger brackets to the structural support beams.
- To accommodate the cover, these lifts come with longer hanger brackets and a larger back plate to seal the drive components.
- Install these lifts as described above for the Alumavator.


Platinum Lifts with Uncovered Powerheads

- The Platinum lift with uncovered powerhead ships without the motor installed and the powerhead with a single hanger bracket uncoupled from the drive shaft and the rest of the boathouse lift structure.


Alumavator Lifts

- The Alumavator lifts come pre-assembled. You only need to attach the hanger brackets to the structural support beams.
- Remove the hanger bolts from the hanger brackets. Loosen the bolts in the slots of the hanger brackets.
- If your structural beams are pressure treated, wrap them with pile wrap where the hanger brackets will be placed.
- Slide the hanger brackets over the structural support beam. Install the upper hanger bolt and secure with the flat washers, lock washer and nut. Place the lower hanger bolt in the bolt holes closest to the bottom of the

- Loosely install the four hanger brackets supporting the drive shaft over the structural support beams as described above for the Alumavator.
- Loosely install the single hanger bracket supporting the gearbox over the structural support beam.
- Slide the single hanger bracket so that the drive pipe inserts into the gearbox coupler and secure with the coupler bolt.
- Slide the lift into the desired position, then fully tighten all hardware on the hanger bracket assemblies.
- To install the motor, first make sure that the 3/16 key is inserted properly in the motor shaft keyway.
- Align the key with the keyway on the gearbox and push the motor shaft down into the gearbox.
- Rotate the motor so that the (4) tapped mounting holes align with the (4) holes in the gearbox flange. Secure the motor with the 3/8 x 1 motor mount bolts and lock washers.

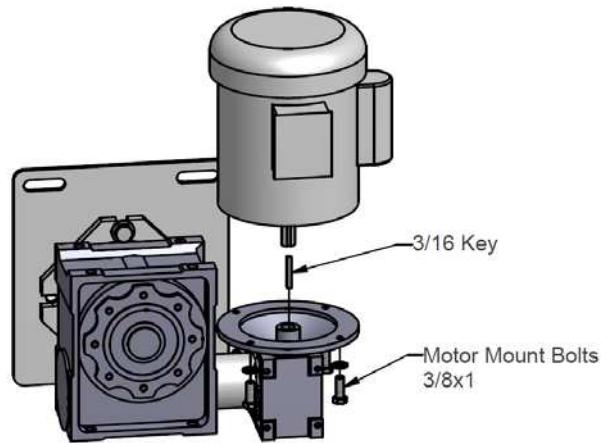

Cable Installation

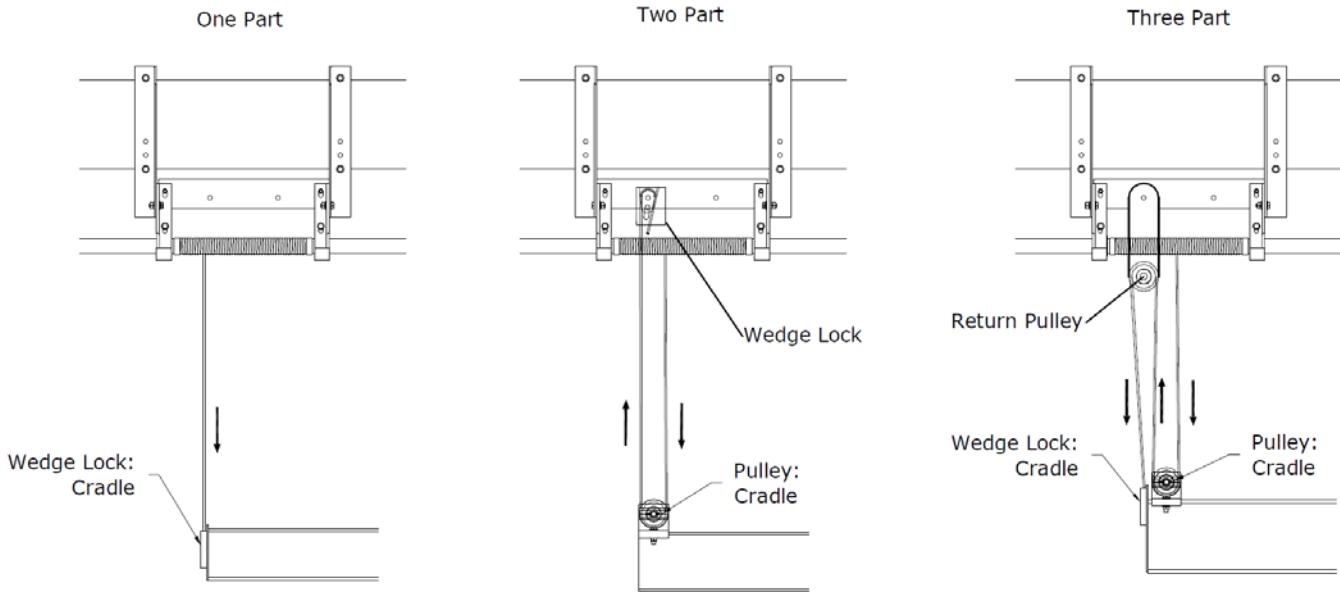

1 PART SYSTEM

- Feed loose end of cable down the center of the wedge lock.
- Loop around wedge (inside lock) and return up through lock.
- Leave about 12" of free cable tail

2 PART SYSTEM

- Thread cable through pulley and return to hanger assembly.
- Feed cable up and through the lock, loop around the wedge and pull cable down through the lock.
- Leave about 12" of free cable tail.

3 PART SYSTEM


- Thread cable through pulley at cradle beam.
- Draw cable up and around the hanger bracket assembly pulley.
- Thread cable down to wedge lock.
- Feed cable down the center of the lock, loop around the edge and return up through the lock.
- Leave about 12" of free cable tail.

NOTE: Do not let cables overlay each other.


WEDGE-LOCK CABLE FASTENING SYSTEM

ADJUST and LEVEL

- Level cradle beams by adjusting cable length using wedge lock.
- Adjustments are made by loosening wedge and pushing the cable through.
- Fasten clamp to cable tail. **DO NOT** clamp tail and cable together.
- Wire tie the free cable tail to load cable. Trim excess cable leaving a minimum 6" of free cable.

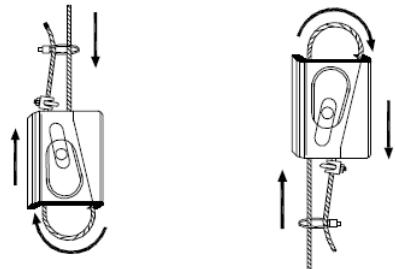

Bunk Board and Guide Post Installation

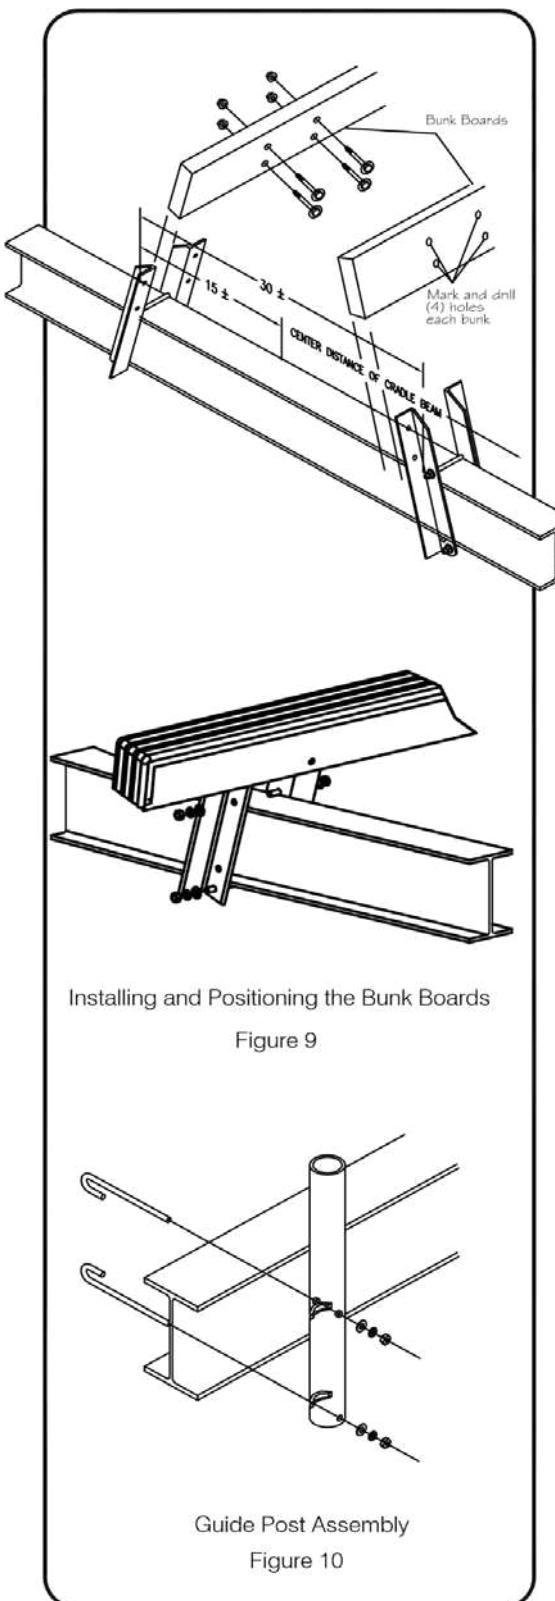

BUNK BOARD MOUNTING ASSEMBLY (Fig. 9)

- The bunk brackets have been pre-installed on the cradle beams. The brackets may be repositioned by loosening the nuts at the bracket and sliding along the cradle beam. Typical dimensions are 30" apart centered on the cradle beams.
- Center the bunk boards across the cradle beams with even overhangs on each side.
- Make sure the bunk boards are flush to the cradle beams and the bunk brackets.
- Mark, then drill (8) $\frac{1}{2}$ " diameter holes for mounting the bunk boards to the bunk brackets.
- Attach the bunk boards with the supplied stainless steel bolts and hardware.

LIFTS WITH ALUMINUM BUNKS

- The aluminum bunks come with mounting brackets pre-installed.
- Center the aluminum bunks on the cradle beams and attach with the supplied stainless steel bolts and hardware.

GUIDE POST ASSEMBLY (Fig. 10)

- The guide post brackets come pre-installed on the cradle beams. The brackets may be repositioned by loosening the nuts on the "J" bolts and sliding along the cradle beam.
- Measure the beam of the boat to be lifted, and fit the guide post brackets to the beam of the boat so that they are centered on the cradle beams.
- Install guide post pipe insert into the brackets and slide PVC protective sleeve over the pipe.
- With boat positioned on the lift, make final adjustments to the fit of the guide posts and then tighten bracket hardware.

Boat Lift Electrical Requirements

Having the proper electrical service to the boat lift is critical to the performance of the lift. Inadequate electrical service could result in damage to the motor and / or the lift controls. When at all possible, the boat lift should have dedicated electrical service to prevent circuit overloading and to minimize interference by other devices on the circuit. Consult the following chart as minimum guidelines for properly sized circuit breaker and wire size based on horsepower and number of motors.

Minimum Breaker and 75C Copper Wire Size (AWG) for Single-Phase A.C. Motors


# and Motor H.P.	Amps to run		Breaker Size		50 Feet		100 feet		200 feet		300 feet		400 feet	
	115V	230V	115V	230V	115V	230V	115V	230V	115V	230V	115V	230V	115V	230V
(2) 3/4 H.P.	23	12	30 A	15 A	#8	#14	#6	#12	#3	#8	#2	#6	#1	#6
(2) 1 H.P.	----	14	----	20 A	----	#14	----	#10	----	#8	----	#6	----	#4
(2) 1 1/2 H.P.	----	18	----	25 A	----	#12	----	#10	----	#6	----	#4	----	#4

Important Notes:

- Please use current motor label to confirm specifications in above chart.
- For Aluminum wire, increase by 1 wire size, minimum.
- The wiring recommendations and diagrams referred to are not meant to supersede any national or local codes.
- Read all instructions and wiring diagrams before connecting or changing wires.
- The appropriate instructions and wiring diagrams are enclosed in the control box.
- Imm Quality Boat Lifts recommends that all electrical work be performed by a licensed electrical contractor.
- Wiring procedures other than those presented by Imm Quality Boat Lifts will void the product warranty.

Electrical: Motor Wiring for Boathouse Lifts


The powerhead cover **does not** need to be removed to wire the motor to a control box. All motor wire leads have been routed to a conduit box located on the back plate of the powerhead enclosure. To connect to the Bonita, Gem or Tigershark control boxes, simply connect the motor wire leads to the appropriate wires in the control box according to the diagrams below.

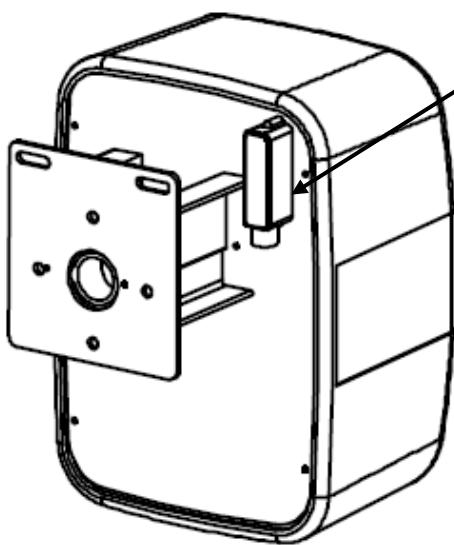


All motor wires are located inside this conduit box.

Note: Imm Quality Boat Lifts recommends that the electrical hookup be performed by a licensed electrician and conforms to all national and local electrical code. The appropriate wiring diagram and further instructions are enclosed by the OEM in the control box. Please read all instructions and wiring diagrams before connecting or changing any wires.

115 V

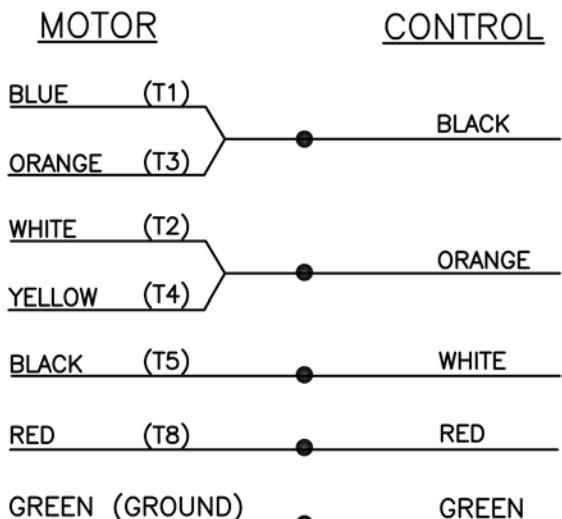

230 V

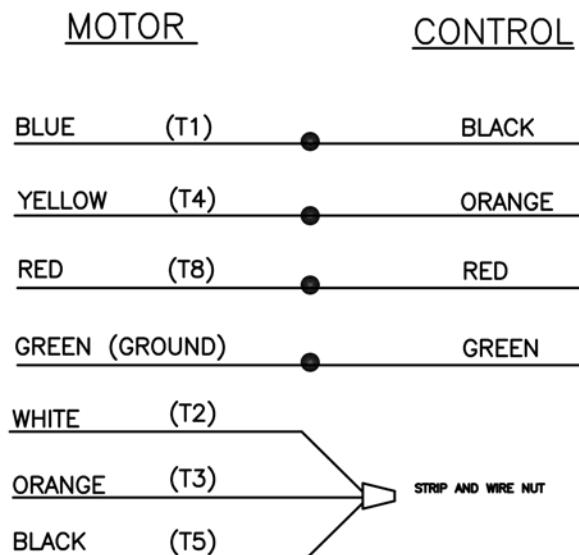

* TO REVERSE MOTOR DIRECTION FOR EITHER VOLTAGE INTERCHANGE BLACK (T5) AND RED (T8)

Imm Quality Boat Lifts Contact Information

Phone: (239) 432-9110

Toll Free: 800-545-5603

Fax: (239) 432-0019

Website: iqboatlifts.com

Sales: sales@iqboatlifts.com

General Inquiries: info@iqboatlifts.com